

ITEM NO.: DIEM FLOOR LAMP #214514

ASSEMBLY INSTRUCTIONS:

※VERYIMPORTANT

PLEASE READ THOROUGHLY. MAKE SURE YOU PROPERLY ALIGN POLES BEFORE SCREWING THEM TOGETHER TO AVOID DAMAGING CONNECTION THREADS. NOT ADHERING TO THIS PROCEDURE MAY VOID YOUR WARRANTY!

1. Carefully unpack and line up all parts on a clean, level surface. Protect assembly surface to avoid scratching the lamp.
2. Gently pull out any excess power cord through the base (A) during each assembly step to prevent the cord from becoming twisted.
3. Thread the tube (B) onto the base (A) by turning clockwise until tight.
4. Insert and thread the tube (C) onto the tube (B) by turning clockwise until tight.
5. Insert and thread the tube (D) onto the tube (C) by turning clockwise until tight.
6. Insert and thread the lamp body (E) onto the tube (D) by turning clockwise until tight.
7. Remove the socket rings (G) from the socket on the lamp body (E). Place the shades (F) on the socket, then secure with the socket rings (G).
8. Install three MAX. to 40 watts vintage Edison type bulb(included) onto the socket.
DO NOT EXCEED RECOMMENDED BULB WATTAGE.
9. Insert the plug into an electrical outlet.
10. Use the 4-way rotary switch (H) on the lamp body (E) to turn lights on and off; rotation 1- 1 x light on, rotation 2 - 2 x lights on, rotation 3 - all 3 x lights on, rotation 4 - all 3 x lights off.


USE 40W * 3 (MAXIMUM) VINTAGE EDISON TYPE BULB (BULB INCLUDED)

“IMPORTANT SAFETY INSTRUCTIONS”

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

* SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

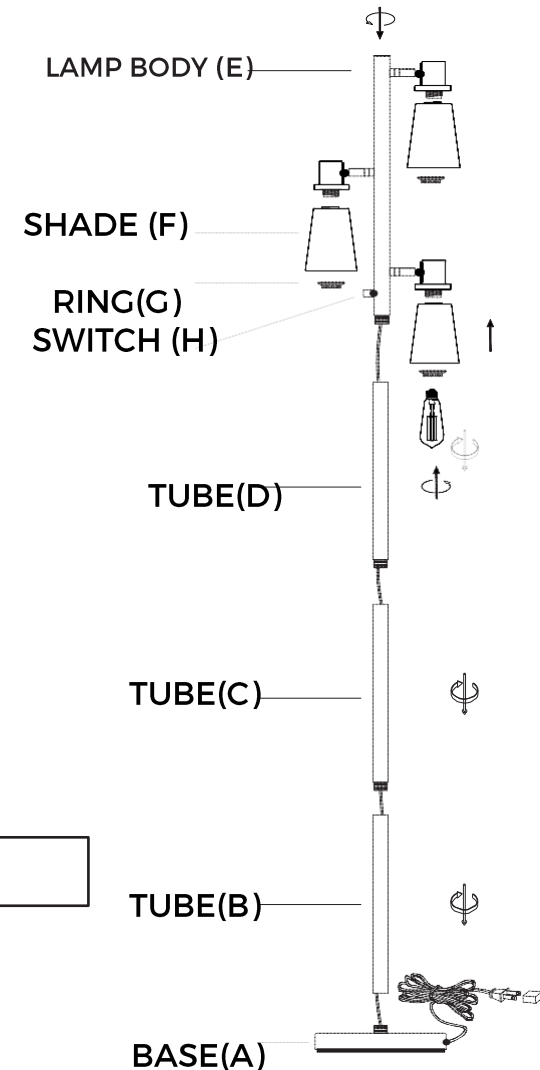

URBAN BARN