URBAN BARN

USE AND CARE GUIDE

216637 DIANNE FLOOR LAMP

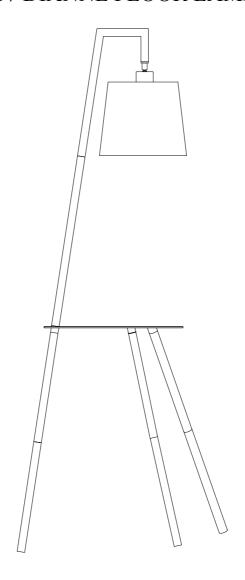


Table of Contents

Safety Information	2
Pre-Installation	3
Planning Installation	3
Package Contents	3
Assembly	6
Care and Cleaning	7
Troubleshooting	7

Safety Information

☐ Consult a qualified electrician with any electrical questions you may have.

Pre-Installation

PLANNING INSTALLATION

Read all instructions before assembly.


To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping.

Keep your receipt and these instructions for proof of purchase.



NOTE: This lamp requires the use of one 120V, 60Hz, 100-Watt max, medium-base type A bulb (not included). Do not exceed the recommended wattage.

PACKAGE CONTENTS

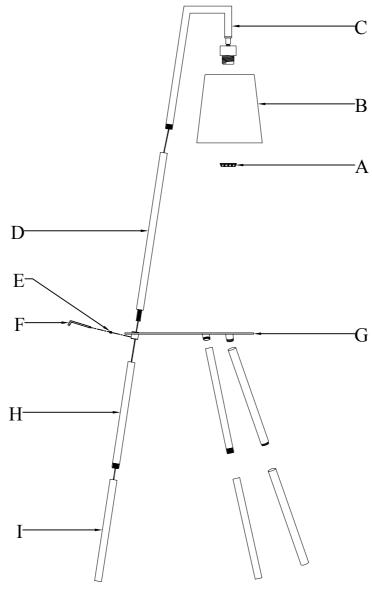


Part	Description	Quantity
A	Socket ring	1
В	Shade	1
С	Arm assembly	1
D	Pole	1
Е	Set screw	1

Part	Description	Quantity
F	Allen wrench	1
G	Metal tray assembly	1
Н	Upper leg	3
I	Lower leg	3

Assembly instructions


1. Unpack the lamp and assemble pole

- □ Carefully organize and place all parts on a smooth, flat surface. line up all of the parts according to the assembly diagram.
- □ Screw pole (D) to bottom of the arm assembly (C).

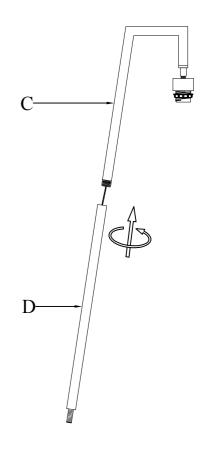


2. Assemble the legs

- □ Screw the two upper legs (H) to bottom of the metal tray assembly (G).
- □ Screw the three lower legs (I) to bottom of the upper legs (H).

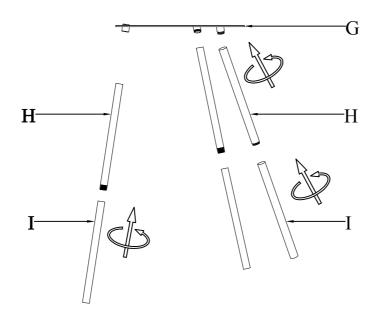

Assembly instructions (continued)


- 3. Assemble the metal tray assembly and shade
- \Box Pull the excess power cord through lower leg (I).
- ☐ Insert the nipple into the hole in metal tray assembly (G) and screw the upper leg (H) to end of the nipple to secure.
- □ Adjust the position of arm and socket to make sure the arm and socket face right as shown.
- □ Secure the pole (D) and arm assembly (C) to metal tray (G) with set screw (E) (Allen wrench (F) included)

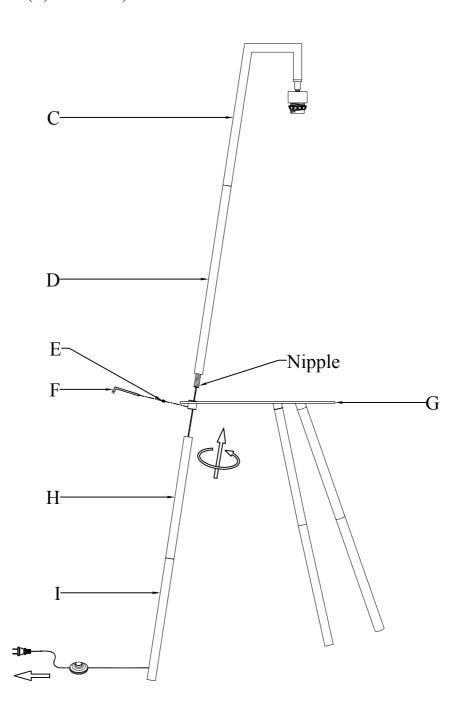

Assembly instructions (continued)

4. Install the bulb

- □ Prior to installing the bulb, inspect socket for silica packet. If packet is present, then remove and throw away. Do not expose it to children or pets.
- □ Remove the socket ring (A) from socket by unscrewing the socket ring (A).
- □ Place the shade (B) over the socket and secure with socket ring (A).
- □ Install the 120V, 60Hz, 100-watt max. medium-base type A bulb (not included) into the socket of the light lamp.
- □ Plug cord into an outlet and turn on at the switch.

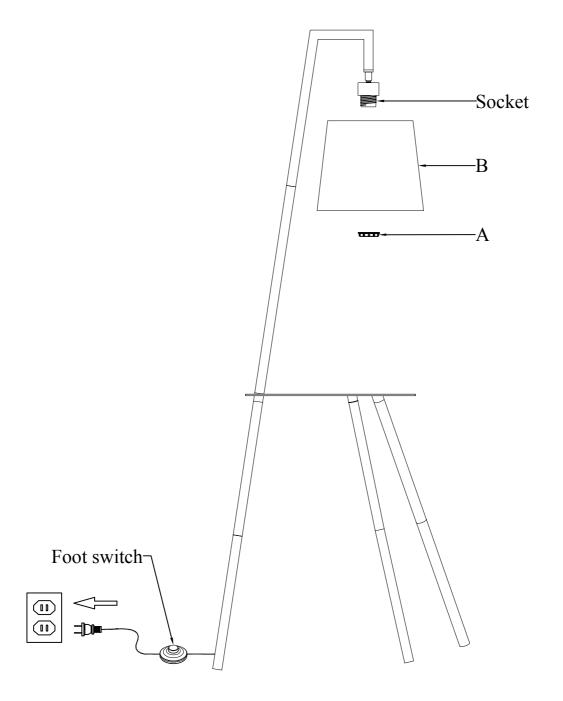

Important safety instructions

□ This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

Care and Cleaning

□ Clean the lamp with a soft, dry cloth. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	☐ The bulb is burned out.	□ Replace the light bulb.
	☐ The power is off.	☐ Ensure that the power supply is turned on.
	□ Did not insert plug into power outlet.	☐ Ensure that the plug is fully and properly inserted into the power outlet.
	☐ The circuit breaker is off.	☐ Ensure that the circuit breaker is set in the on position.
The fuse blows or a circuit breaker trips when the light is turned on.	☐ There is an exposed wire. ☐ There are too many items on one circuit.	☐ Discontinue use of the lamp. ☐ Unplug other items on the circuit.

URBAN BARN