

Wickham Bed

Lit Wickham

URBAN BARN

Assembly Instructions / Instructions d'assemblage

CAUTION: Please read all instructions before starting the assembly of this product. These pieces are heavy. In order to prevent personal injury and ensure that this product is not damaged during the assembly process, it is strongly recommended to enlist the assistance of one or more people. In case of excess stain, wipe the bottom of the unit before placing on any surface.

ATTENTION : Lire attentivement les instructions avant de commencer l'assemblage de ce produit. Les pièces sont lourdes ; pour éviter toute blessure et pour s'assurer que le produit n'est pas endommagé pendant l'assemblage, il est recommandé de faire appel à une ou plusieurs autres personnes. En cas de tache excessive, essuyer le fond de l'unité avant de la placer sur une surface.

WARNING: Protective glide is placed under each leg of the furniture to avoid scratches on floor surface. Some floor surfaces can be sensitive to scratches and markings, if you are not sure, consult with your dealer.

AVERTISSEMENT : Les pattes du meuble sont munies de coussinets protecteurs destinés à protéger le plancher. Certains revêtements de sol peuvent être très fragiles. En cas de doute, consulter le fournisseur

List of Hardware / Liste du matériel

No.	Description		Qty
A	Bolt / Boulon	Ø5/16"x4-1/2"L	 8
B	Lock Washer C / Rondelle de blocage C	Ø5/16"x34x16x3mm	 8
C	Nut/ Écrou	Ø5/16"x17mm	 8
D	Wrench / Clé	12mm	 1
E	Flat Washer / Rondelle plate	Ø5/16"x19x2mm	 12
	Lock Washer / Rondelle de blocage	Ø5/16"x12x2mm	
	Bolt / Boulon	Ø5/16"x1-1/2"L	
F	Screw / Vis	#25x4mm	 28
G	Flat Washer/ Rondelle plate	Ø5/16"x19x2mm	 6
	Lock washer / Rondelle de blocage	Ø5/16"x12x2mm	
	Bolt / Boulon	Ø5/16"x2-1/2"L	
H	Flat Washer / Rondelle plate	Ø1/4"x16x2mm	 2
	Lock Washer / Rondelle de blocage	Ø1/4"x10x2mm	
	Bolt / Boulon	Ø1/4"x1"L	
I	L Bracket /Support En L	Ø1/4"	 1
J	Allen Key / Clé Allen	M4x3-5/32"	 1

NOTE:

Assemble on a soft surface.

Do not tighten bolts until all parts and hardware of the unit are assembled.

Assembler le meuble sur une surface souple.

Bien serrer les boulons une fois le meuble complètement assemblé seulement.



WARNING: Only use the hand Tools provided
AVERTISSEMENT : Utiliser uniquement les outils à main fournis.

List of Hardware / Liste du matériel

No.	Description		Qty	
1	Headboard / Tête de lit		1	
2R	Left Leg / Patte gauche de tête de lit		1	
2L	Right Leg / Patte droite de tête de lit		1	
3	Headboard Stretcher / Rail inférieure pour tête de lit		1	
4	Mending Plate / Plaque de raccord		2	
5	Footboard /		1	
6	Side Rails /		2	
7	Slats Roll /		1	
8	Slat Support A /	950 x 88 x 18mm		2
9	Slat Support B / I	950 x 88 x 18mm		2
10	Slat Support Leg /	371 x 38 x 38mm		6
11	Drawer Support Leg /	162 x 28 x 28mm		3
12	Footboard Drawer Frame /		1	

NOTE:

Assemble on a soft surface.

Do not tighten bolts until all parts and hardware of the unit are assembled.

Assembler le meuble sur une surface souple.

Bien serrer les boulons une fois le meuble complètement assemblé seulement.



WARNING: Only use the hand Tools provided
AVERTISSEMENT : Utiliser uniquement les outils à main fournis.

Step 1


Assemble the Headboard Stretcher (3), Left Leg (2L), and Right Leg (2R) using Part E. Tighten with the provided Wrench (D).

Step 2

Connect the assembled bottom frame to the Headboard (1) using Part E and tighten with the Wrench (D).

Step 3


Further secure the assembled headboard frame using Mending Plate (4) and Part E. Tighten with a screwdriver.

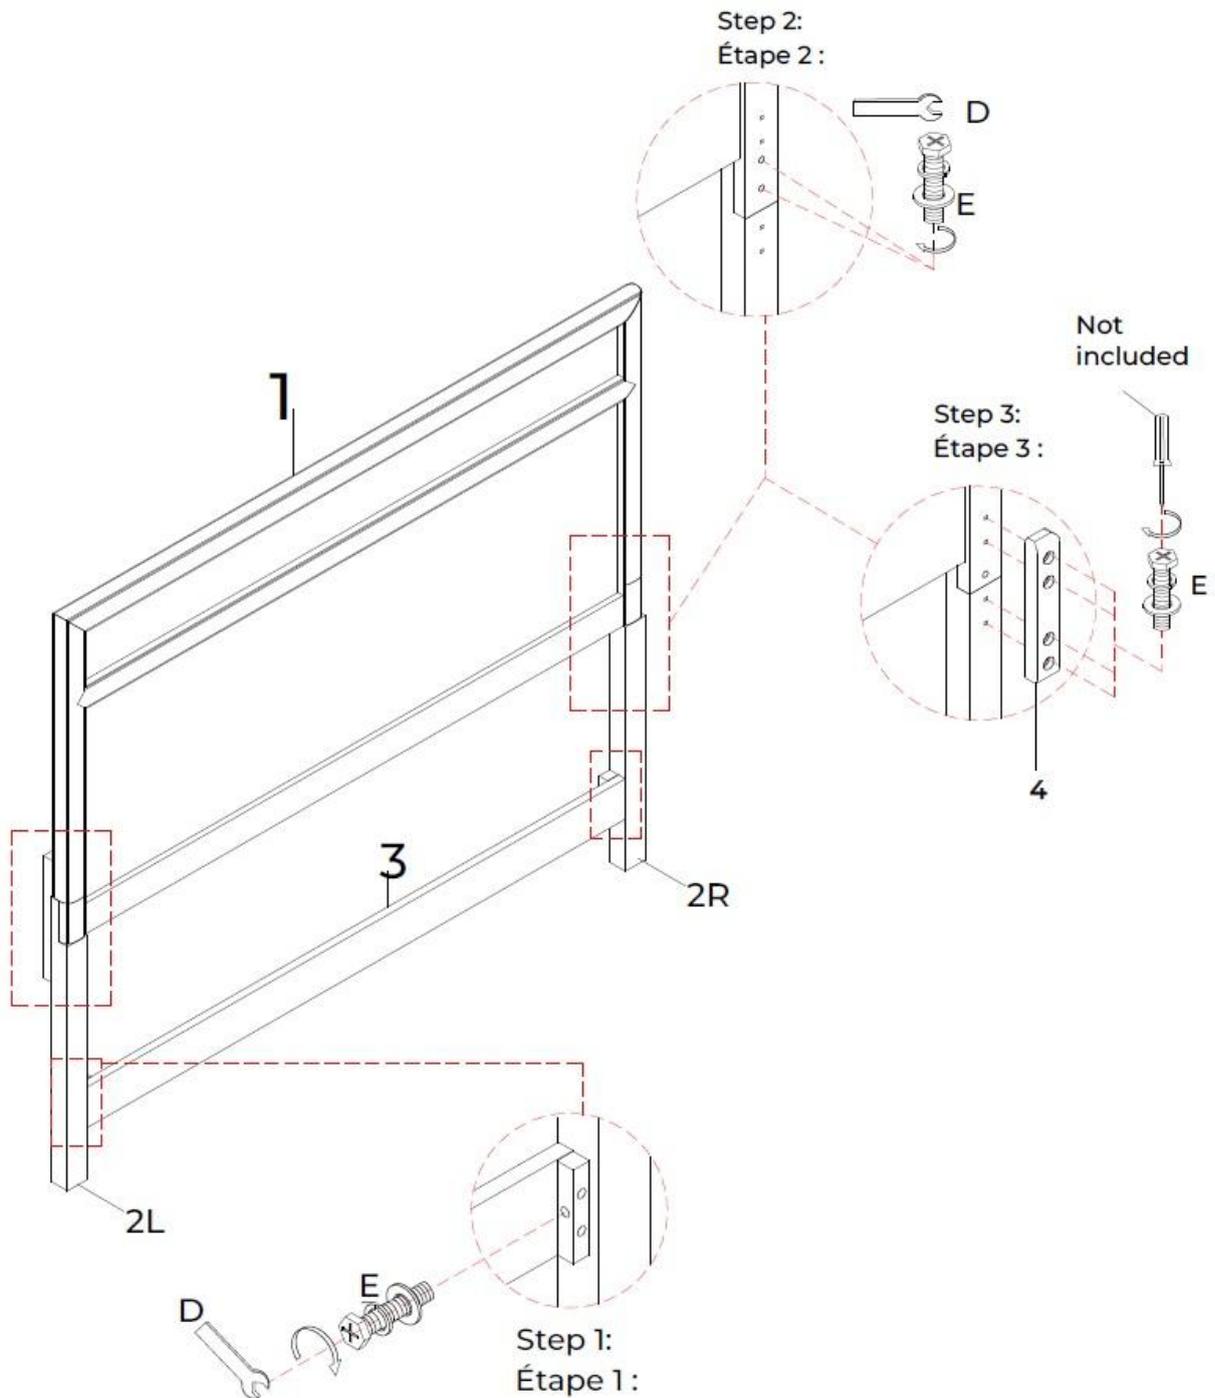

Step 4


To protect the drawers during transportation, they are pre-installed into the Footboard Drawer Frame (12).

Before assembling the bed, the drawers must be removed. Pull the drawer out fully and locate the glide release levers on both sides of the drawer box. Lift the left lever up and push the right lever down at the same time, then gently pull the drawer straight out.

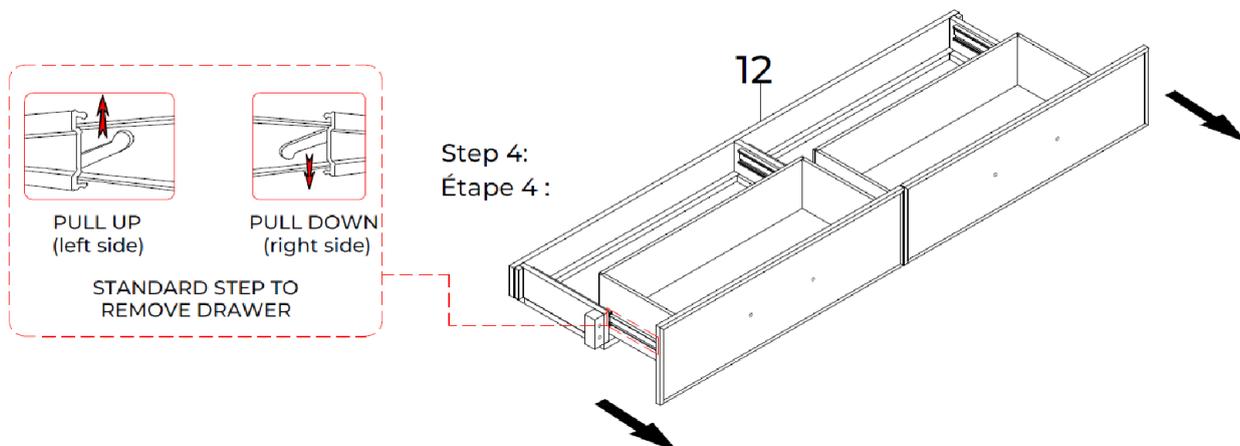

Step 5

With the Footboard Drawer Frame (12) turned upside down, install the Drawer Support Leg (11). Adjust the levelers as needed.

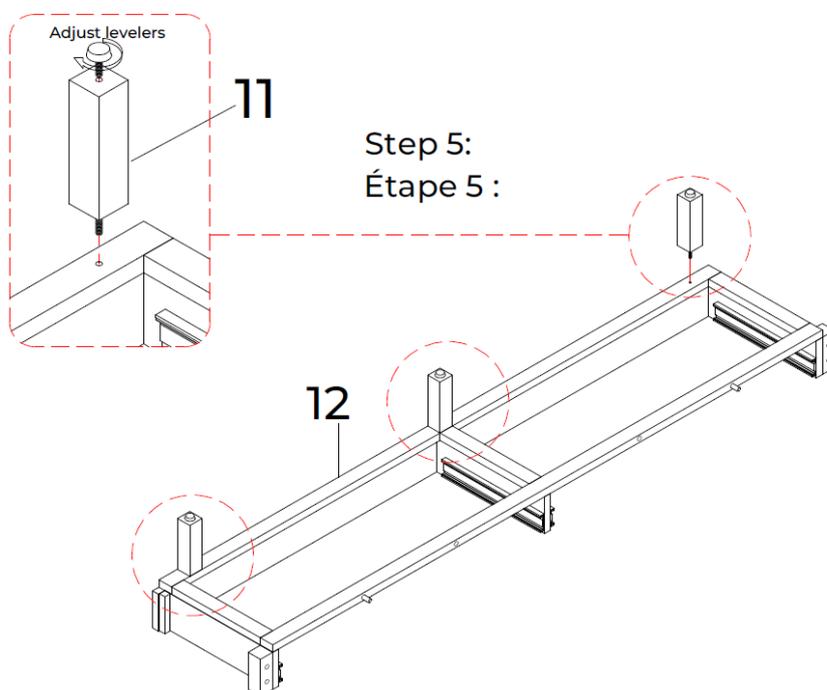

Step 6


Attach the center of the Footboard Drawer Frame (12) to the Footboard (5) using Part H and the L Bracket (I). Tighten with the Allen Key (J).

Step 7

Attach the sides of the Footboard Drawer Frame (12) to the Footboard (5) using Part G. Tighten with the Allen Key (J).

Step 8


Secure the frame by tightening the additional screws into the predrilled holes using Part G and the Allen Key (J). Adjust the levelers as necessary.

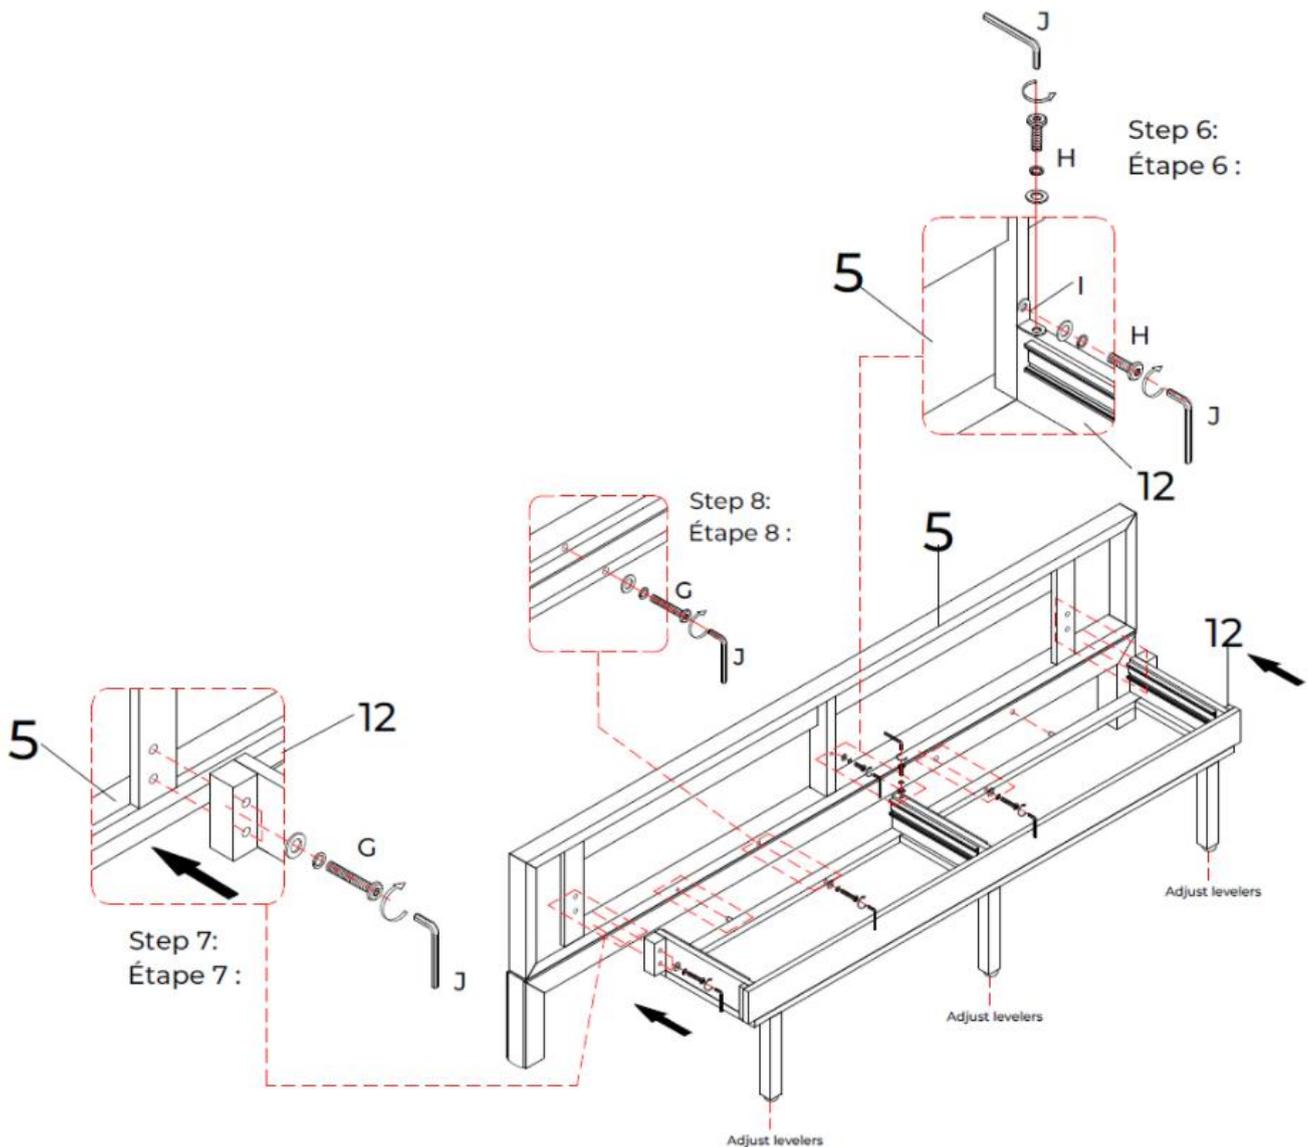

Step 9


Remove the handles from inside the drawers and attach them to the front side.

Reinstall the drawers into the assembled footboard. It is recommended for 2 people to reinstall the drawers due to the size and weight of the drawers. Fully extend the metal glides and align the drawer glides with the corresponding tracks. Gently push the drawer inward until it is locked by the lever. Open and close the drawer to ensure it slides smoothly and is properly aligned.

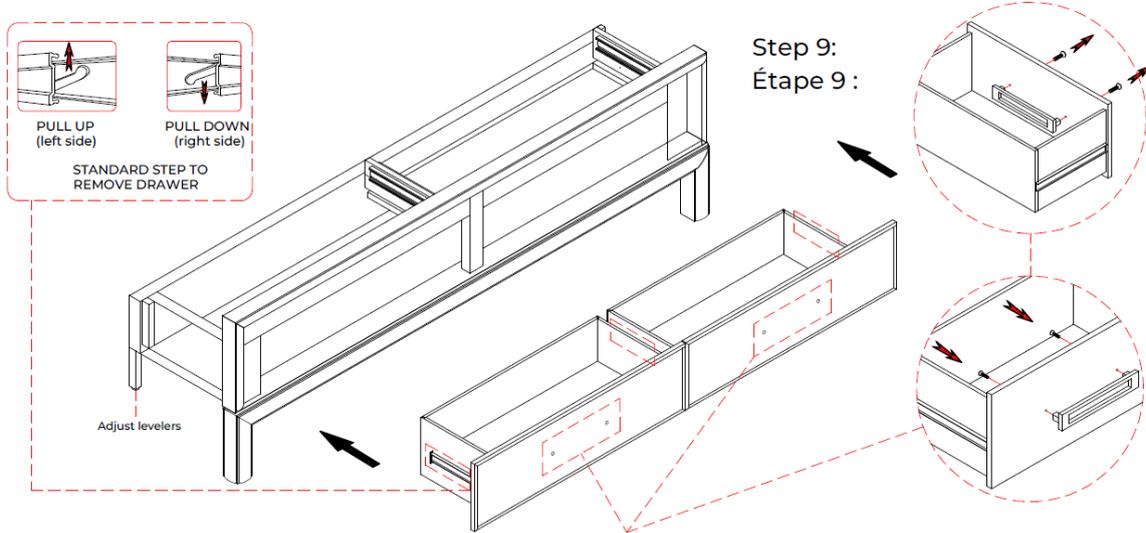

Step 10

Assemble the bed slats by connecting the Slat Roll (7), Slat Support A (8), Slat Support B (9). Attach the Slat Support Legs (10) by screwing them in. Once assembled, flip the bed slats right side up.

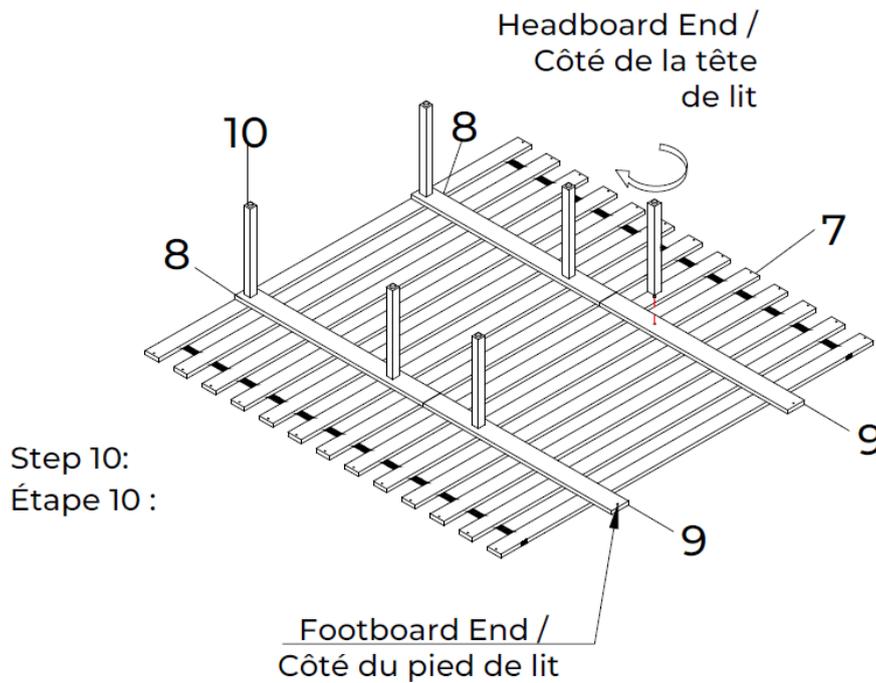

Step 11

Attach the Side Rails (6) to the Headboard and Footboard. Fasten Bolt (A), Lock Washer (B), and Nut (C) into the pre-drilled holes using the provided Wrench (D). Tighten the bolt only until it reached the marked line. Do not overtighten.

Step 12

Place the assembled bed slats inside the bed frame and secure them using Screws (F).

