Burkart Counter Stool
Tabouret Burkart

URBAN BARN

Assembly Instructions / Instructions d'assemblage

Please follow instructions closely as deviation from these instructions may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage during assembly.

Suivre attentivement ces instructions. Le non-respect de ces instructions pourrait poser un risque pour la sécurité et invalider votre garantie.

Il est recommandé d'assembler le produit sur une surface souple comme un tapis pour éviter d'endommager le produit pendant l'assemblage.

Ref. / Réf.	Hardware List / Liste du matériel		Qty / Qté
A	Allen Key / Clé Allen		1
B	Bolt / Boulon		4
C	Washer / Rondelle		4

Step 1 / Étape 1

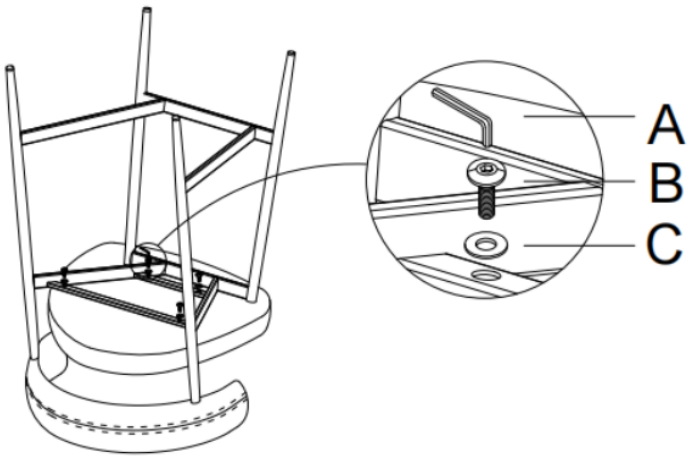

Assembled / Tabouret assemblé

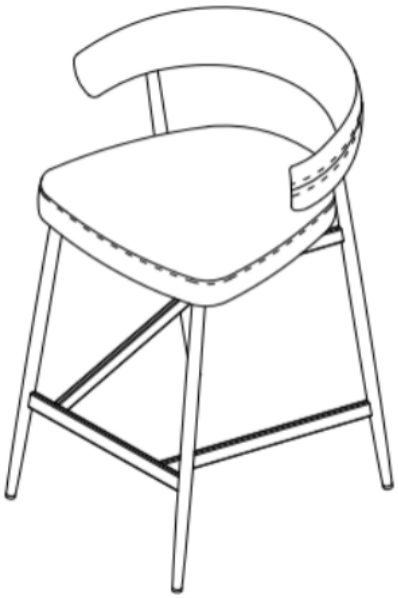

URBAN BARN